


# Installing a roll out tray

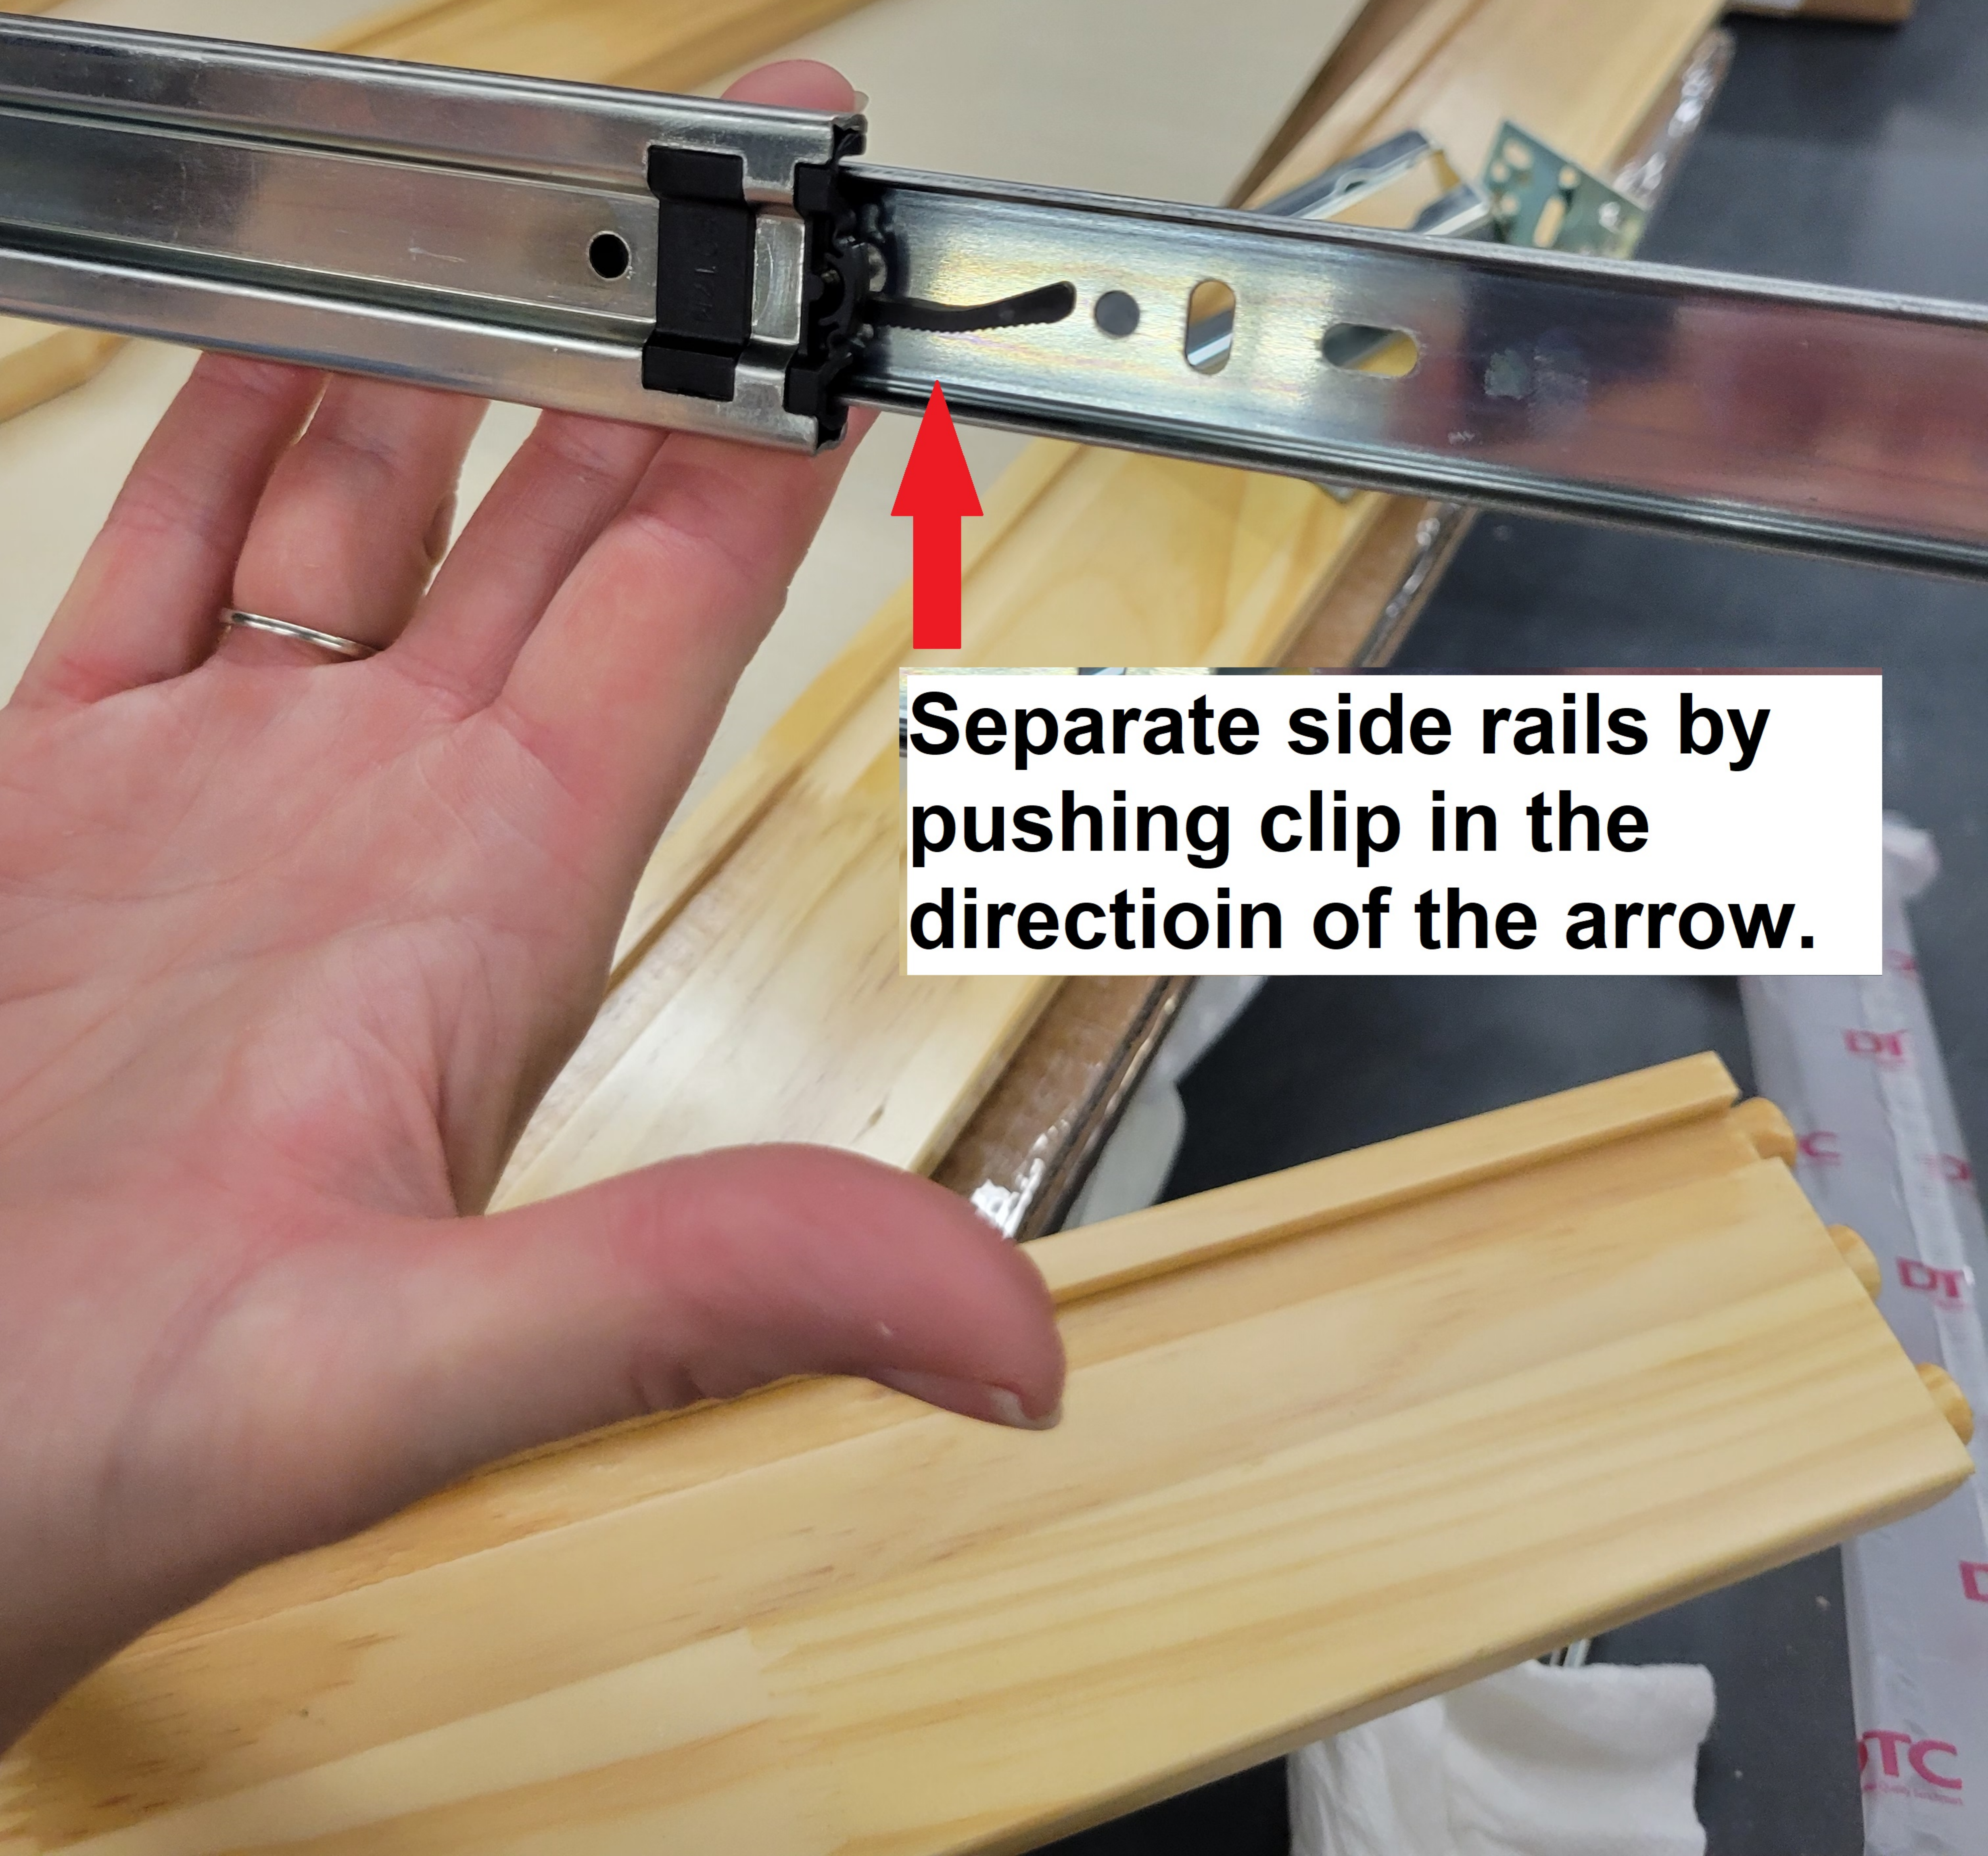


**Separate side rails by pushing clip in the direction of the arrow.**



Rails after separation

Attach back clips to side rails as seen below.



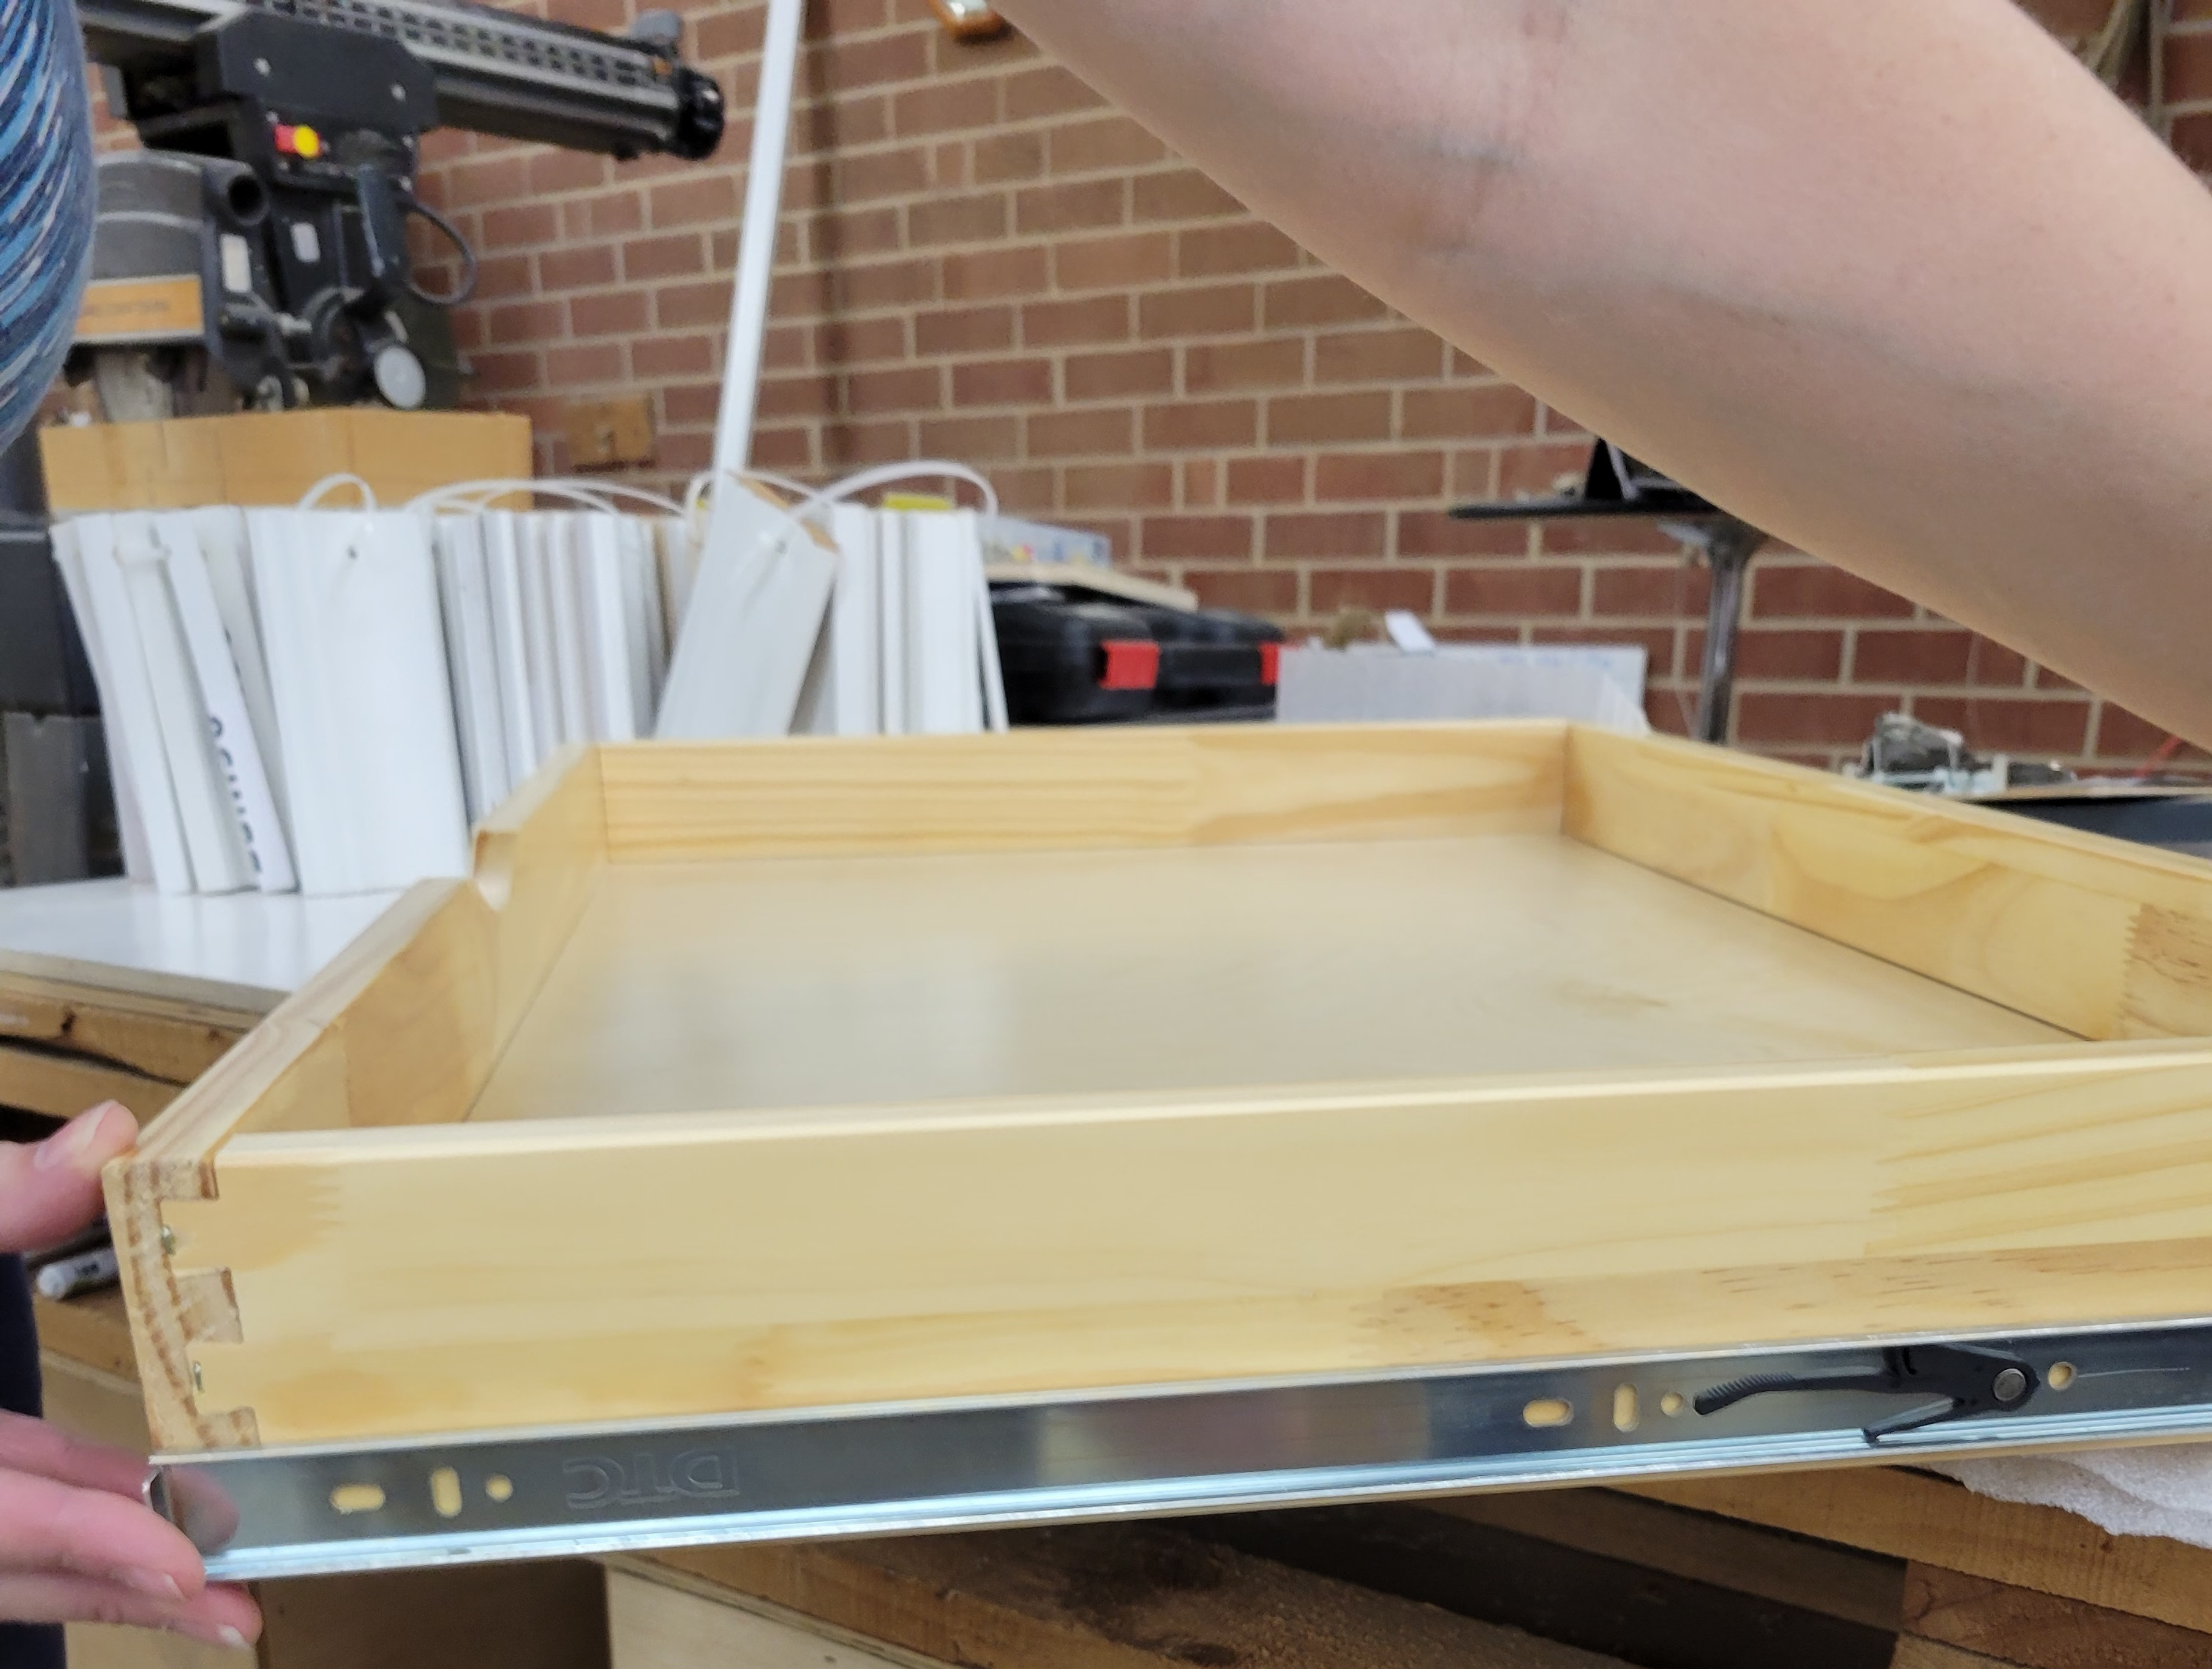


Attach narrow rail sections to sides of assembled tray with provided screws. Note the orientation of rail in relation to front of tray.





Mount wide portion of rails to inside of cabinet face frame as shown at desired height. slider of rail will need to be moved to expose screw hole.

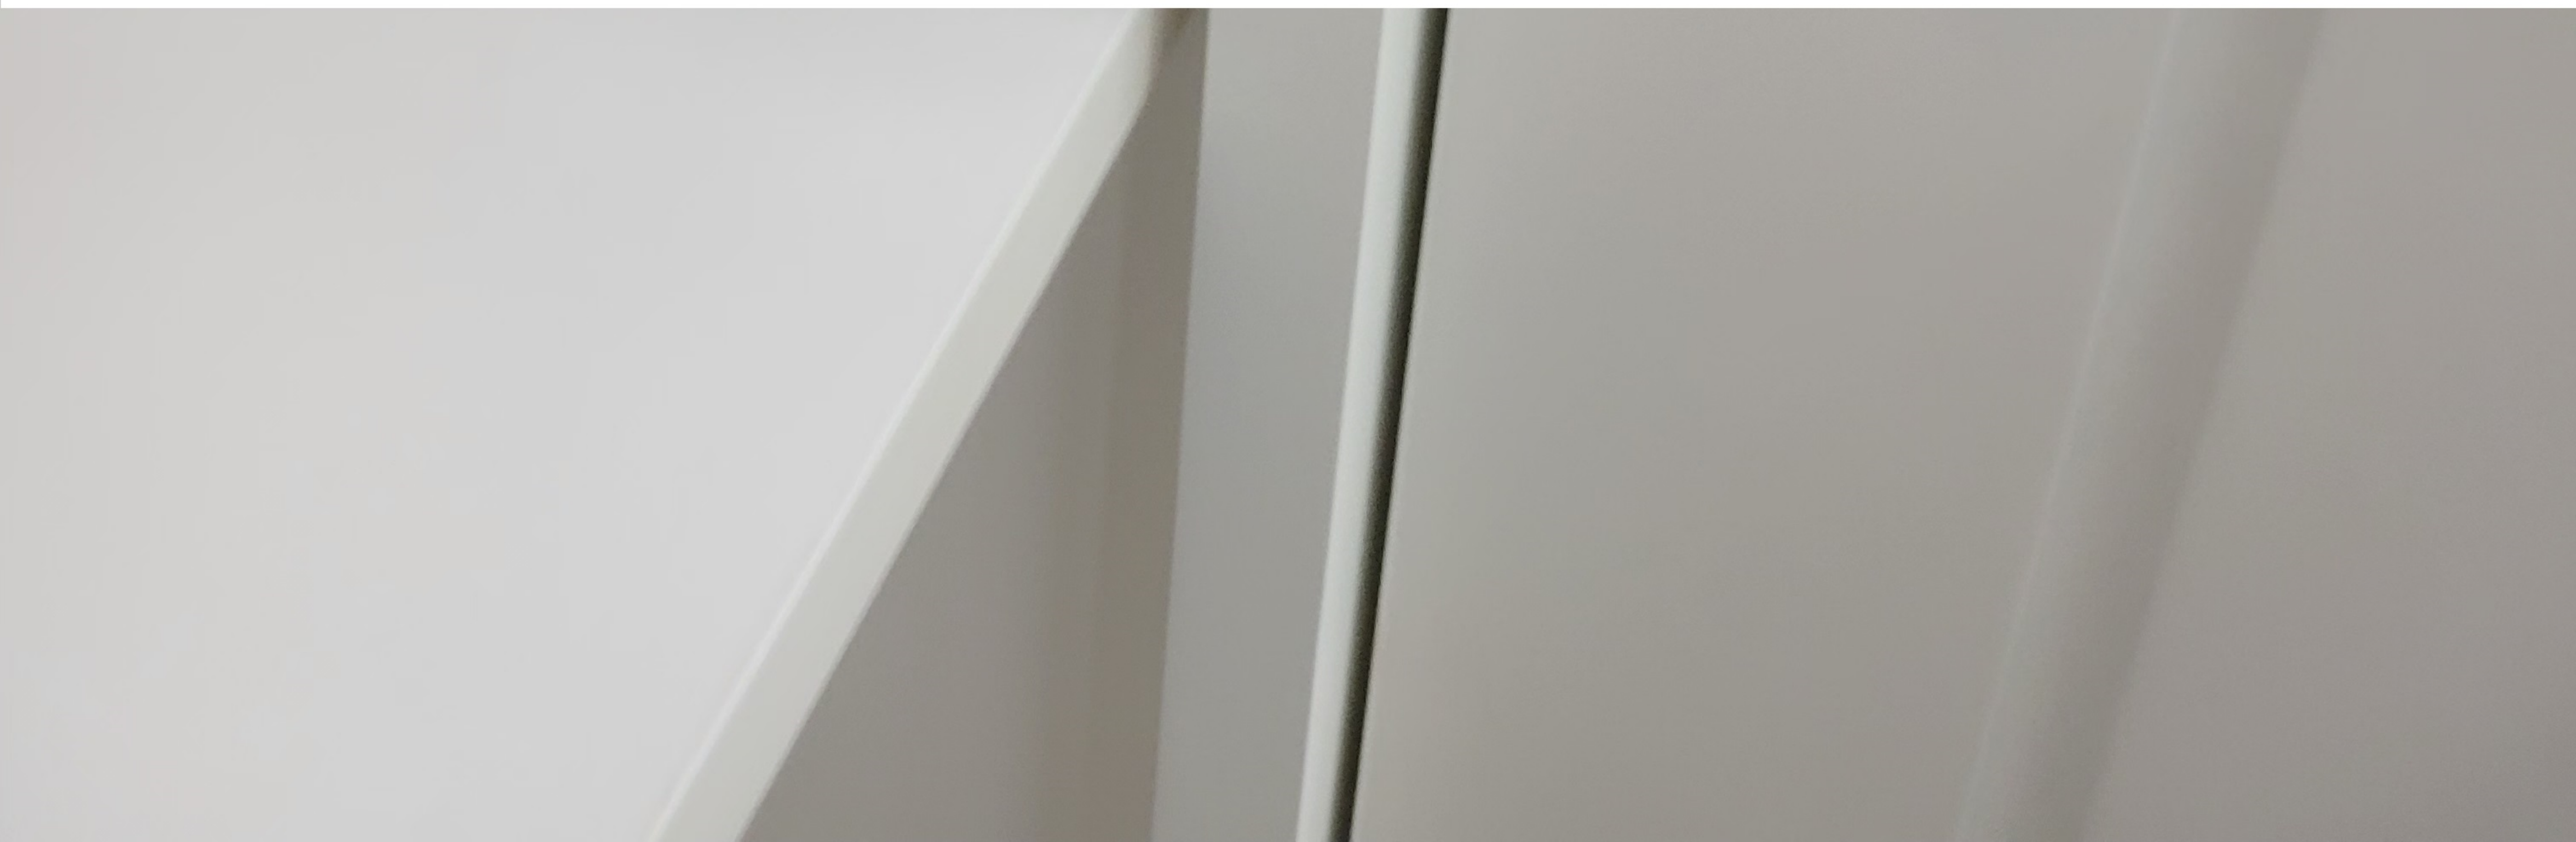

Mount back clip to cabinet back panel. Be sure to keep rail level and at a consistent distance from side panel of cabinet.

